



# Parabellum

## MACHINE GUN KIT


Assembly Directions- All Scales

# Step 1


Assemble the cooling barrel



- 1 Insert the aluminum tube through the holes and bond in place. Leave 1/2 inch extra tubing at each end to be trimmed as necessary during the final assembly

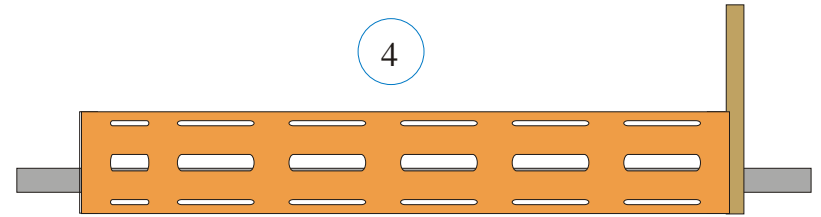


Complete the assembly by lightly sanding all parts and seal with primer or white glue and set aside to dry.

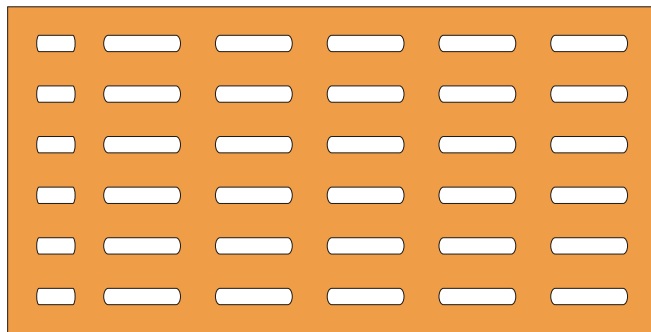

Cooling Barrel

- 2 Roll paper tube around the two end caps and metal tube section. Make sure the seam is centered at the bottom.

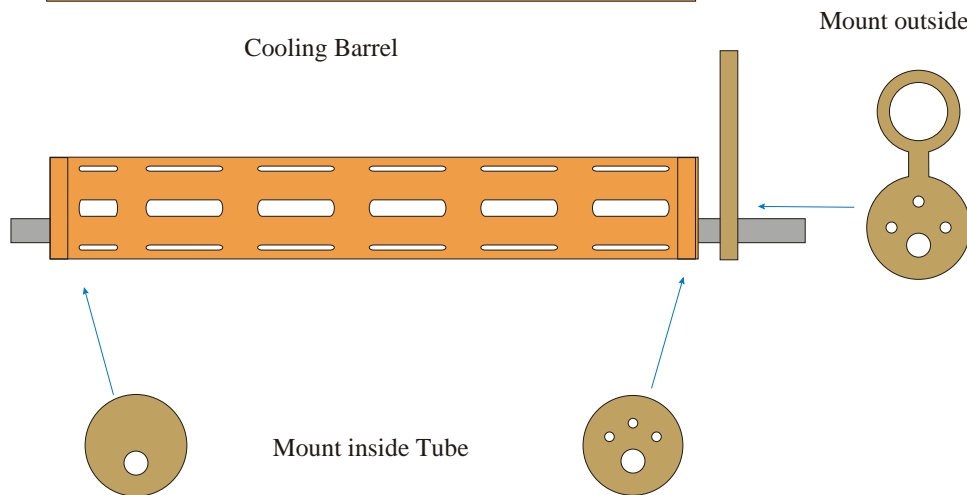

Mount outside

Mount inside Tube

- 3 Detail Note  
Round site can be trimmed off and replaced with rectangle site as shown in the cover sheet photo. Site can be made from brass wire.




or

Mount two pieces of wire inside the site ring to simulate the cross hairs.

ASSEMBLY DRAWINGS SHOWN AT 1 / 6 SCALE

Right Side

Left Side

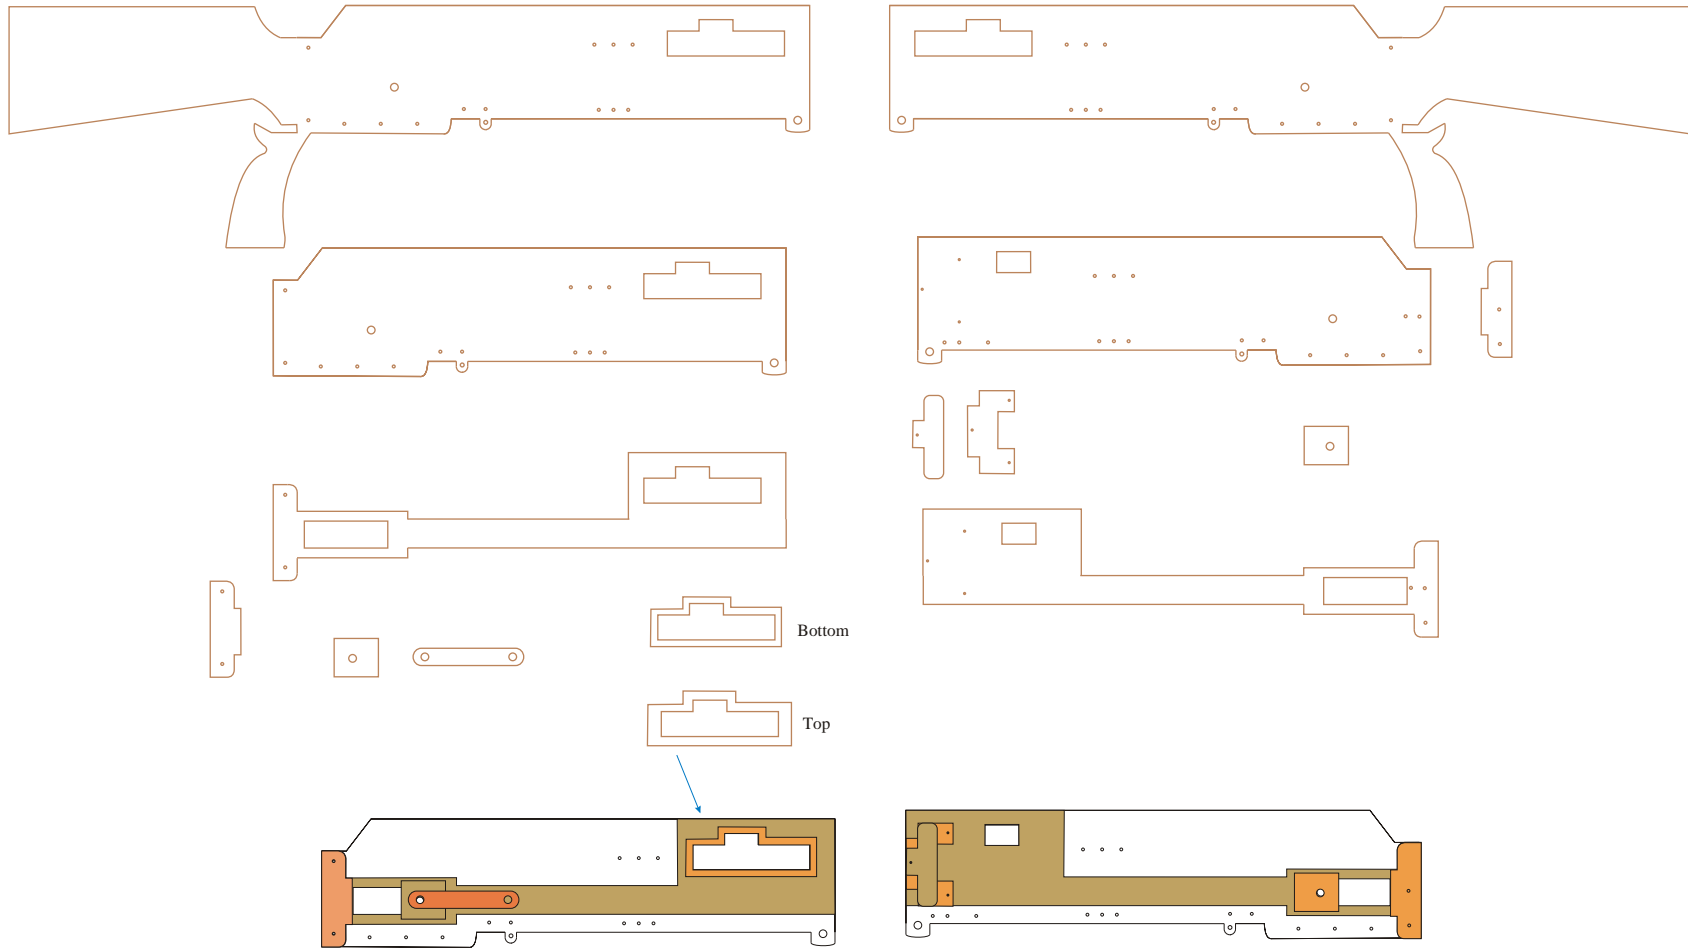

Step 2

Assemble the Lock and Stock

Laminate all parts in order as shown in the diagram.




**Parabellum Machine Gun**  
ARIZONA MODEL AIRCRAFTERS  
A registered trademark of Prototype Production and Engineering Inc.  
167954 South 78th Way Unit 202, Scottsdale, Arizona 85262

**ASSEMBLY DIAGRAM**

**ARIZONA** SHEET 2 of 5

Copyright 1999 by Arizona Model Aircrafters a registered trademark of Prototype Production and Engineering Inc.

ASSEMBLY DRAWINGS SHOWN AT 1 / 6 SCALE

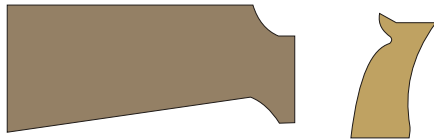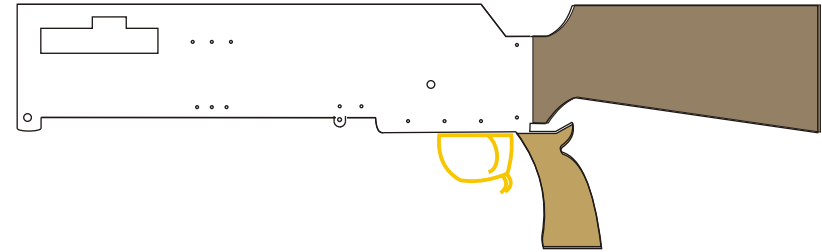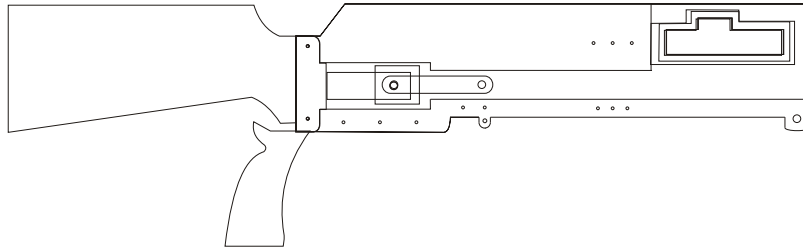

### Step 3

Assemble the Grips and Stock

Laminate all parts as shown in the diagram.  
Sand and seal all parts prior to painting.

### Step 4

Assemble the Trigger and Guard

Bend wire together as shown in the illustration to form the trigger and guard. Glue in place.

1/6 Scale Size



1/5 Scale Size



1/4 Scale Size



1/3 Scale Size



**Parabellum Machine Gun**  
**ARIZONA MODEL AIRCRAFTERS**  
A registered trademark of Prototype Production and Engineering, Inc.  
16795 164th Ave. NW Unit 520, Seattle, WA 98148  
**ASSEMBLY DIAGRAM**



**ARIZONA** SHEET 3 of 5

Copyright 1999 by Arizona Model Aircrafters a registered trademark of Prototype Production and Engineering, Inc.

### Step 5



#### Assemble the Feed Magazines.

Note that an extra drum and bracket are included as a spare for the gunner.

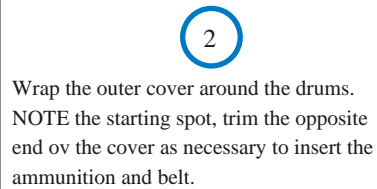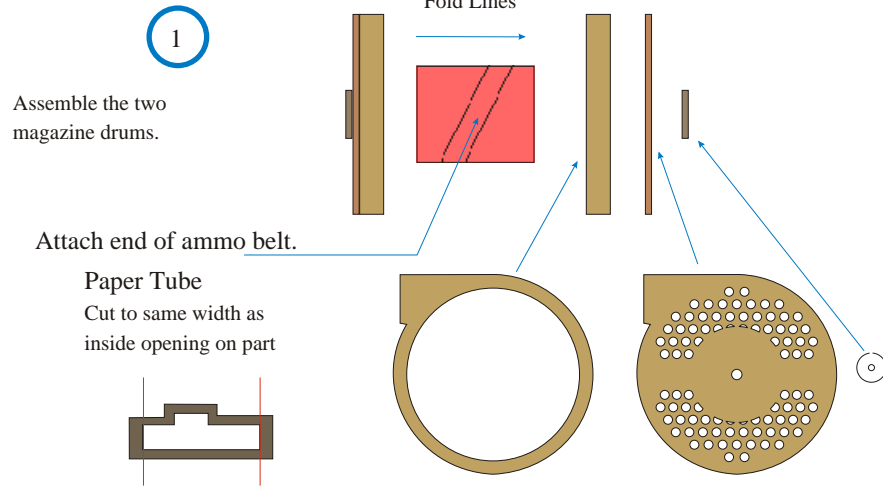

Be Sure to wrap the ammo belt in the proper direction. Remember to leave enough of the belt free to feed through the gun. ( see page 5)

#### Supply Side Support Arm

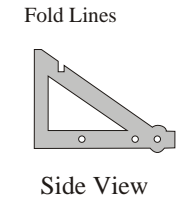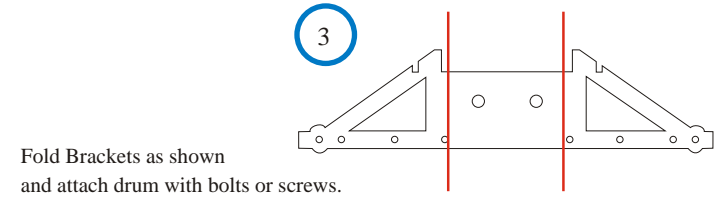

# Parabellum Machine Gun

ARIZONA MODEL AIRCRAFTERS

A registered trademark of Prototype Production and Engineering, Inc.

16750 South 73rd Way Unit 207, Scottsdale, Arizona 85261

ASSEMBLY DIAGRAM

ARIZONA


SHEET 4 of 5

Copyright 1999 by Arizona Model Aircrafters a registered trademark of Prototype Production and Engineering, Inc.

Step 6

Paint:

Finish the entire gun to a gun metal (dark gray) except the pistol grip and stock. These should be sanded smooth and stained to Rosewood or Mahogany and varnished.

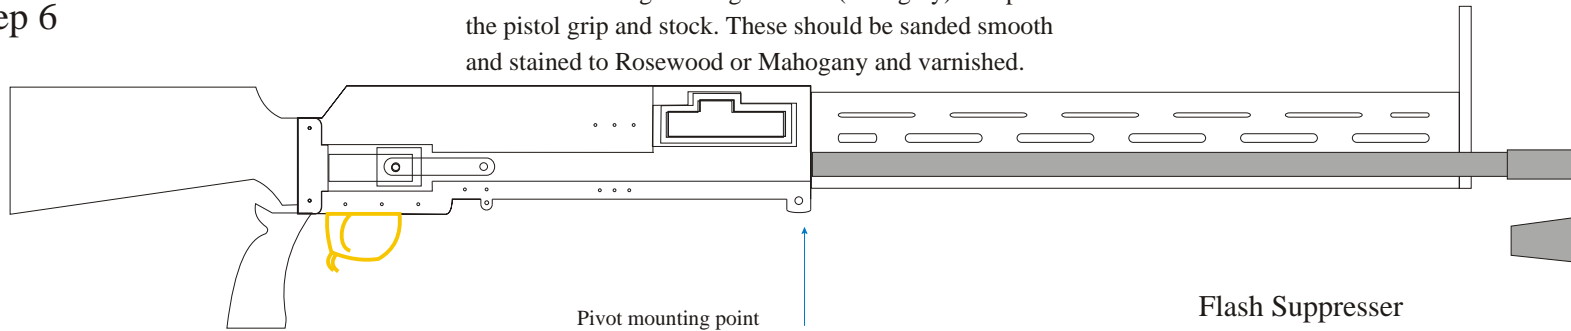

Pivot mounting point  
Reenforce with tubing  
for flying models.

Flash Suppressor


Straight type: Make from scrap piece of tubing sized to fit over the barrel tube.

Or

Conical type: Cut from aluminum lithoplate and glue around barrel.

Magazine:

Attach one of the magazines to the right side of the gun at the shell port. Feed the ammo belt through the gun leaving about 3/8 to 1/2 inch of belt protruding from the other side.

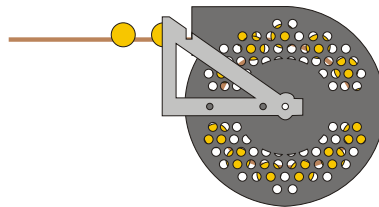

**Parabellum Machine Gun**  
ARIZONA MODEL AIRCRAFTERS  
A registered trademark of Prototype Production and Engineering, Inc.  
16795 54th Ave. #100, Scottsdale, Arizona 85254

**ASSEMBLY DIAGRAM**

**ARIZONA** SHEET 5 of 5

Copyright 1999 by Arizona Model Aircrafters a registered trademark of Prototype Production and Engineering, Inc.