


Instrument Body Assembly

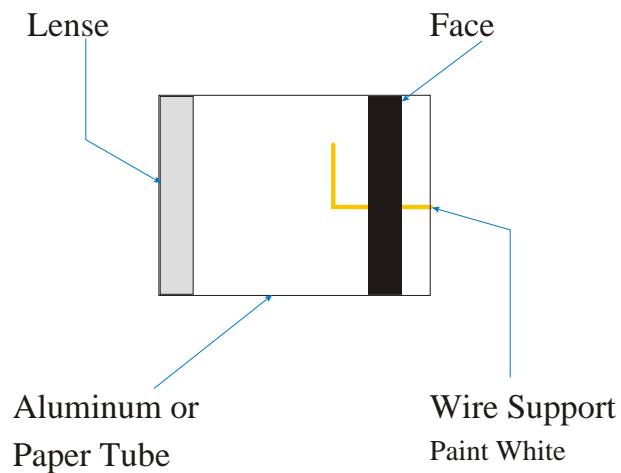

Make instrument bodies from rolled strips of aluminum lithoplate or strips of manila folder paper. Paint the inside flat black to finish. Brass or aluminum tube sections can be substituted for the lithoplate however the edges of the laser cut parts will need to be sanded to reduce the diameter slightly. Use bent wire or pins painted white to simulate the dial indicators. Assemble with white glue only CA will fog the plastic.

British Instruments

ARIZONA MODEL AIRCRAFTERS

A registered trademark of Digital Design LLC 13814 N.56th Place, Scottsdale Arizona 85254

ASSEMBLY DIAGRAM



Model Aircrafters
www.arizonamodels.com

SHEET 1 of 1

Copyright 2006 by Arizona Model Aircrafters a registered trademark of Digital Design LLC