


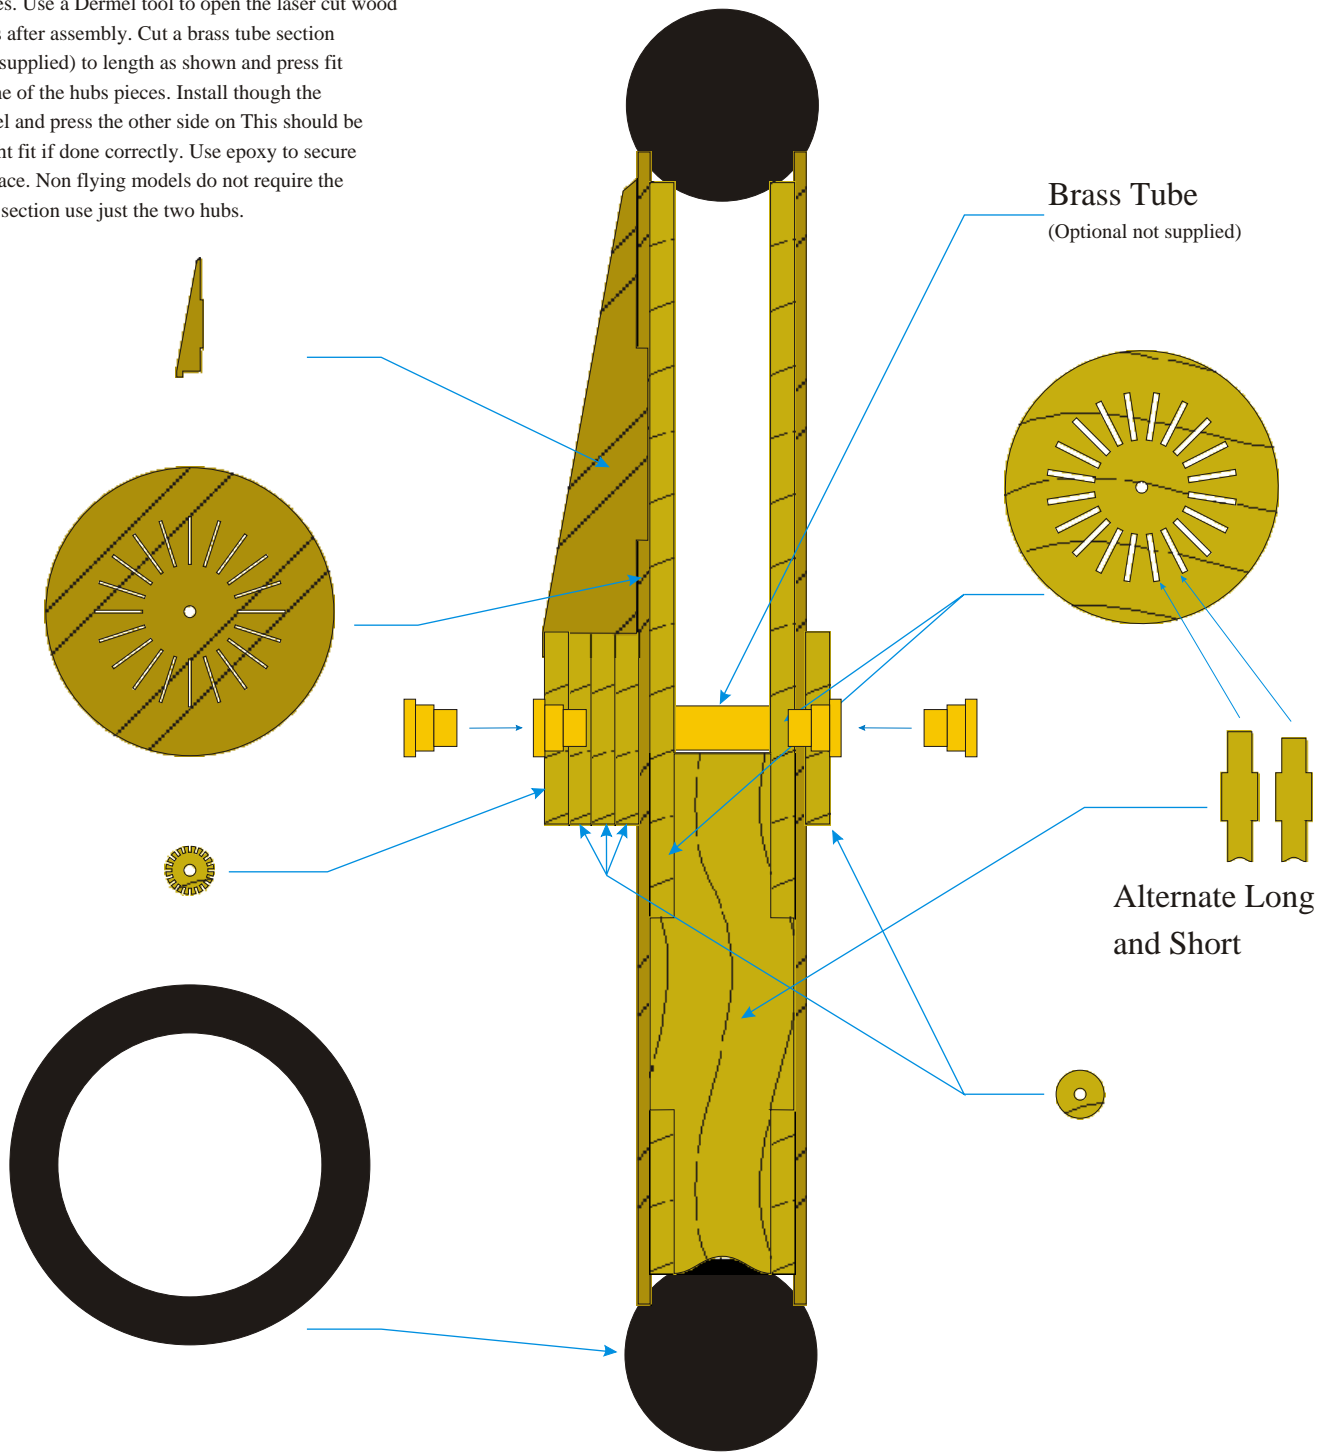

Hub Assembly:

Flying models should have the wheels reinforced with a brass insert between the two machined hub pieces. Use a Dremel tool to open the laser cut wood sides after assembly. Cut a brass tube section (not supplied) to length as shown and press fit to one of the hubs pieces. Install though the wheel and press the other side on This should be a tight fit if done correctly. Use epoxy to secure in place. Non flying models do not require the tube section use just the two hubs.



COVERED WHEELS

ARIZONA MODEL AIRCRAFTERS

A registered trademark of Digital Design, LLC.
13814 North 56th Place, Scottsdale Arizona 85254.

ASSEMBLY DIAGRAM

COMPONENTS OF THIS DESIGN GRAPHIC AND REPRESENTATION ARE REPRODUCED.



Copyright 2004 by Arizona Model Aircrafters.
A registered trademark of Digital Design, LLC.